
## MATRIX

## **CARABINER LOCK INSTALLATION GUIDE**



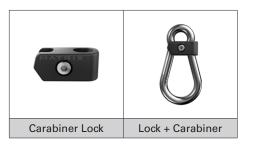



The Carabiner Lock is designed to work exclusively with Matrix brand strength equipment to ensure carabiner clips are not removed and lost when changing attachments.


To install, follow these simple steps:

- 1. Attach carabiner to equipment clip
- 2. Align carabiner pin to clip pockets
- 3. Ensure Matrix logo is at the top of the lock, facing outward
- 4. Secure lock to the carabiner using a 3mm hex wrench

**NOTE**: Excessively worn or malfunctioning carabiners should not be used. Check the carabiner and clip for wear and proper functioning prior to installation and machine use.

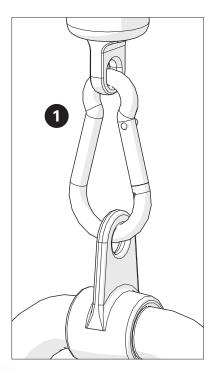

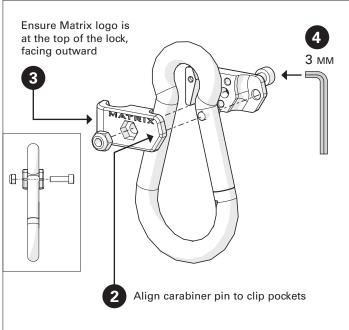

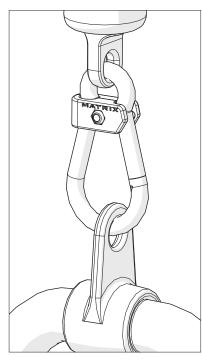

© 2023 Johnson Health Tech | Rev 1.0 A